

Stainless Steel Soap Dispenser

Instruction Manual

Usage Instruction

Installation:

1. Dip the holes $\Phi 2-\Phi 6$ on the wall according to the position as showed, then insert the provided rubber stopper into the hole and fix the ring on it.
2. As shown in Figure 2, insert the soap dispenser to the fixed ring, tighten the hexagon screw by the hexagon key for installing the soap dispenser.

Usage Method:

1. For refilling the soap dispenser personally, firstly open the cover on the top of soap dispenser, then open the lid of inner bottle to fill with the soap.
(Attention: do not screw the lid of inner bottle tightly in order to keep airing.)
2. For using the disposable bottle with soap, before installation, put downward the small outlet of inner bottle and remove the big cover on top, then open the small lid on the outlet.
3. As shown in Figure 4, push the stick of the buckle, pull down the inner bottle with pump. Unscrew clockwise the attached empty bottle, then screw anticlockwise the bottle with soap into the pump instead.

Attention:

- ① The bottle and the black semicircle base must be in straight line.
- ② do not screw tightly the lid of inner bottle in order to keep airing.
- ③ make sure the waterproof ring inside the pump stay properly.

4. As shown in Figure 5 , put the inner bottle into the metal shell until it buckles into the small window on the shell completely.

