

# Installation Instructions


## Manual Soap Dispenser

Thanks for choosing our products , for better service , please read all the instructions before you begin.

### Installation tips

The double tap is only available for ceramic tile, fiber glass, plastic tile, glass, mirrors and other flat surface.

### Dispenser Components

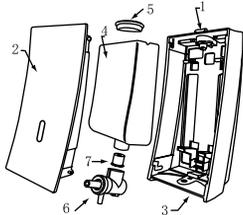

#### Dispenser Components

- 1, Lock
- 2, Cover
- 3, housing unit
- 4, chamber
- 5, cap
- 6, pump
- 7, valve

### Installation instructions



#### Tape Mounting:

1. Make sure mounting surface is flat, clean and dry. (Tape mounting is only recommended for mirrors or similar surfaces)
2. Remove protective backing from adhesive tapes and press dispenser firmly against the mounting surface for about 1 minute and allow 24 hours before use.

#### Screw Mounting:

1. Hold dispenser against wall in desired location, open cover and mark the 4- ØMM holes through the backplate.
2. Install provided anchors into dry wall and secure the dispenser with screws provided.

### Cartridge Installation Instructions

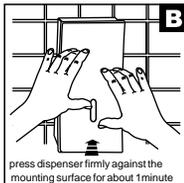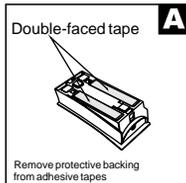

1. Remove the liquid chamber from the unit.
2. Apply double-faced tape tabs to the raised mounting pads on the back (top and bottom) of the unit. Remove the protective backings from the tape tabs. Do not fill the chamber for 24 hours.
3. Firmly press the unit into position on the wall. Hold it in place for 1 minute, ensuring a strong bond with the tape to the wall.

 DO NOT FILL THE DISPENSER FOR 24 HOURS

4. Only after the tap or screw has cured in 24 hours ,can the unit support the weight of the liquids. Fill each chamber with your choice of liquids by removing the top cap. Please note, the valve in the bottom of the chamber must not be removed or lost during installation or cleaning or the pump will not operate properly.
5. IMPORTANT: The pumps must be primed before the liquids will flow! if the chambers become empty, you must re-prime the pumps.

### To prime the pumps

1. Push the pump button in.
2. With holding the pump button in.
3. Place your finger over the spout of the pump to block the airflow up into the pump.
4. Keep your finger over the spout and release the pump button. (This creates a partial vacuum in the pump chamber, when the button is released)
5. Remove your finger from the spout and repeat those until you have a continuous flow of liquid.

### How to refill the soap

1. Insert the key to the lock on the top of dispenser , turn to "ON"
2. Push up the cover to the top, then move the cover. Take out the chamber and pump and refill with soap.
3. Install the full chamber after the pump is installed properly.
4. Lock the dispenser by turning the key to "off" .