

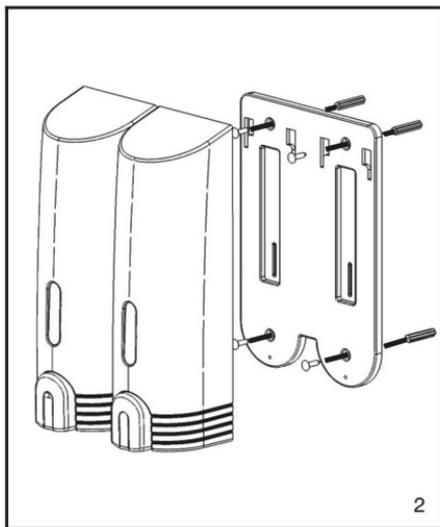



Installation Instruction

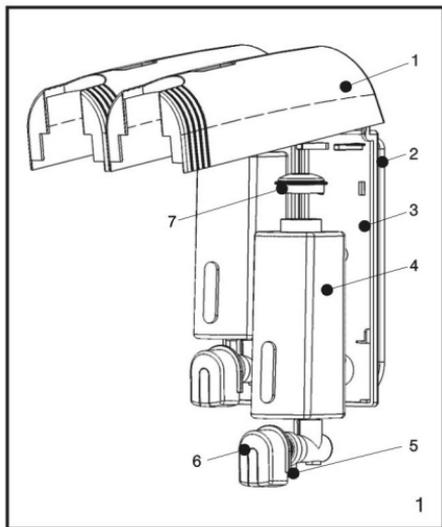

Put the rear cover on the wall, mark the location of the install hole. Drill the 4- \varnothing 6mm hole according to the mark., use the screw with this product to fix the rear cover on the wall.

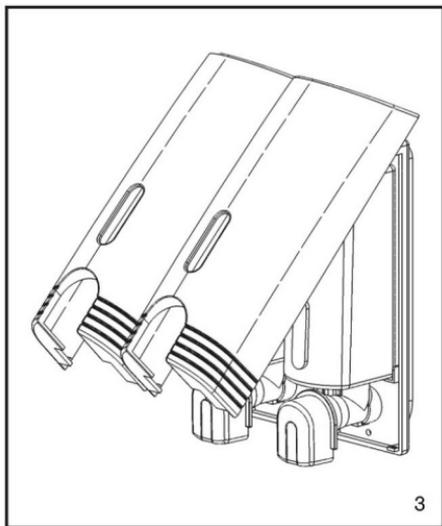

Hold the base clawing back on rear cover, open the front cover, take out the soap dispenser bottle, close the bottle cap after injection the liquid soap, fix the soap dispenser body on the rear cover.

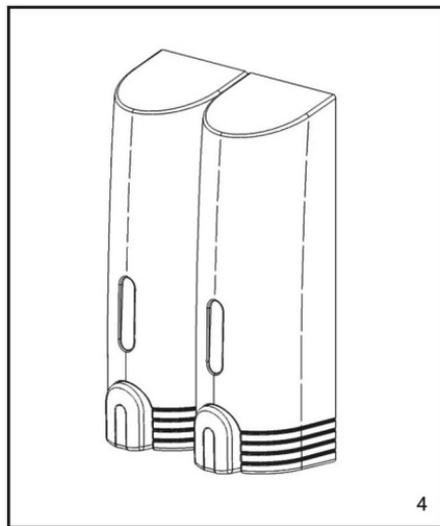

Close the front cover and lock it to use.