

Manual Instructions for Automatic Soap Dispenser

1. TWO WAYS TO OPENING DISPENSER

- 1) Before mounting the dispenser on wall, press the lock spring on top of back plate (Fig1)
- 2) After mounting the dispenser on wall, insert key in the slots on top of cover and depressing latch (Fig2)

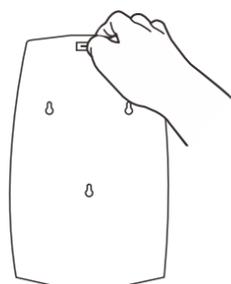


Fig1

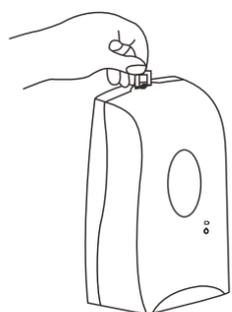


Fig2

2. SCREW MOUNTING DISPENSER

For porous, textured, or wallpapered surfaces, screw mounting is recommended. Ensure that mounting hardware is suitable for your wall surface.

- 1) The dispenser may be mounted using three self-tapping screws and wall anchors. Ensure that proper mounting hardware is used for your wall composition
- 2) Put the dispenser on wall, mark the drill holes according to the holes on back plate. (Fig3)

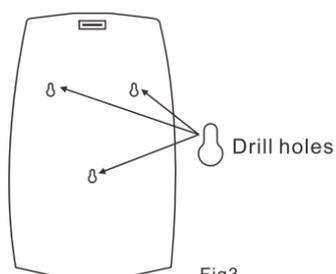


Fig3

3. TAPE MOUNTING DISPENSER

Tape mounting is possible using enclosed one small and one bigger tape pads.

- 1) Wipe back of dispenser thoroughly with a clean dry cloth.
- 2) Remove backing paper from one side of tape pads. Carefully align pads on sections of dispenser as shown. Do not cover latch opening. Press tape firmly against dispenser. (Fig4)
- 3) Clean mounting surface on tile, mirror, etc. thoroughly by alcohol and a clean cloth. Allow surface to dry completely.
- 4) Make a light level line where bottom of dispenser will be located. Ensure bottom edge of dispenser is a minimum 25.5cm above any surface, e.g. counter top, back splash, etc.

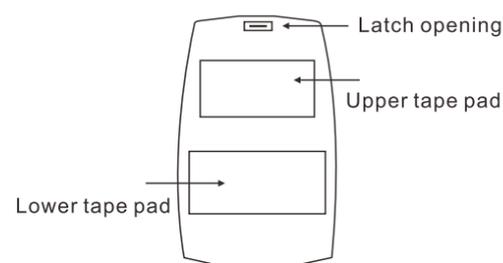


Fig4

- 5) Remove remaining backing paper from tape pads. Align bottom edge of dispenser with line and press against mounting surface. Open dispenser and press firmly against mounting surface
- 6) Allow dispenser to remain empty for 24 hours before installing soap refill

4. INSTALLING BATTERIES IN DISPENSER

- 1) Open dispenser cover.
- 2) Unsnap battery cover. Remove cover and carefully set aside.
- 3) Install 4* C size batteries according to proper polarity. (Fig 5) Use only new (LR14) C size batteries.
- 4) Reinstall battery cover ensuring both snaps are secured.

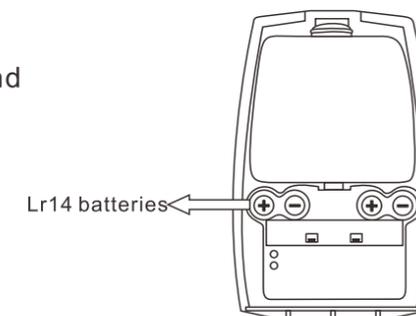



Fig5

5. REFILL IN DISPENSER

▲Warning: Should refill with sanitizer by the attached funnel to avoid the liquid dropping on the electronic components.

If some liquid leak from the bottle, must dry it up at once.

- 1) Open the front cover of dispenser.
- 2) Open the top cover on cartridge.
- 3) Do not take out the cartridge from dispenser, just refill with sanitizer by attached funnel then close well the top cover.

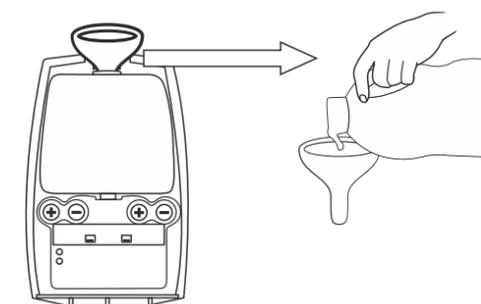

6. Indicate light (Fig6)

 Power indicate light

When red light flashes, the batteries are running out, please change them.
When red light flashes quickly, the front cover is not closed well, please close it firmly.

 When the drip-light flashes, the dispenser works properly

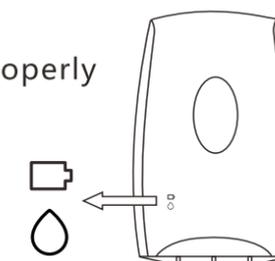


Fig6