


Instruction for 1300ml Manual Foam Dispenser

Parts


Dispenser	(1)
Key	(1)
Screw	(3)
Anchor	(3)
Instrucion Shett	(1)

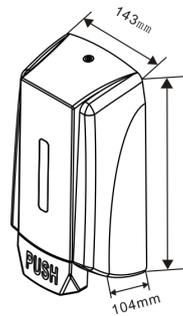

Installation of Dispenser

Tape mounting (Fig.1) :

1. Make sure mounting surface is flat ,clean and dry.(Tape mounting is only recommended for mirrors or similar surfaces.)
2. Remove protective backing from adhesive tapes and press dispenser firmly against the mounting surface for about 15 seconds.Use the key to open front cover and press directly for an additional 15 seconds and allow 4 hours before use.

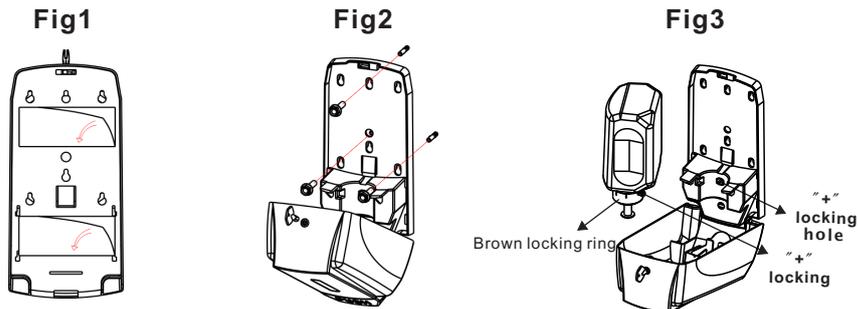

Screw Mounting(Fig.2):

1. Hold dispenser against wall in desired location, Use the key to open the cover and mark the holes through the backplate(at less mark 3 holes.)
2. Intall provided anchors into drywall and secure the dispenser with screws provided.

Cartridge installation (Fig.3)

1. Use the key to open the dispenser ad pull cover forward away from the wall or mirror.
2. Place the cartridge on the platform .Make sure the "+" locking on the pump is fit the "+" locking hole on the dispenser.
3. Close dispenser cover securely and the dispenser is ready to use.

Remark:

Do not use the gel or similar liquid.