



Automatic Soap Dispenser Aluminum stand Manual

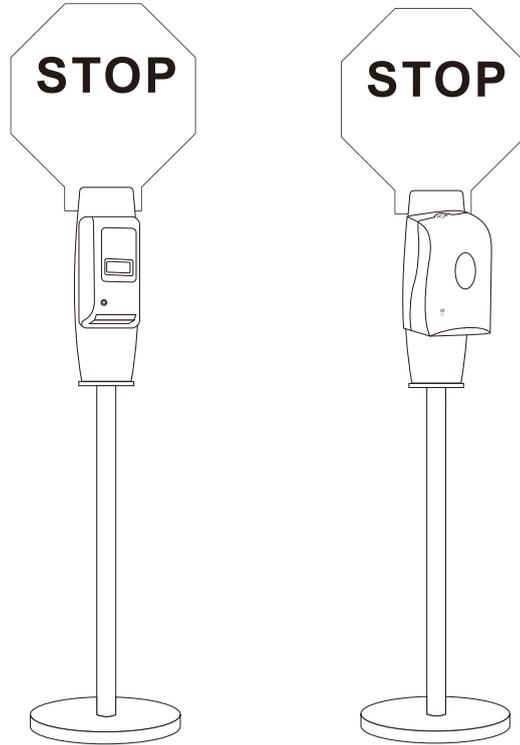

Check all components

Parts	QTY
Soap dispenser	1
Base	1
Pole	3
Paper bill board	1
Black plate	1
Screw accessories	1 bag
Key	1
Tableting	1


Step 1

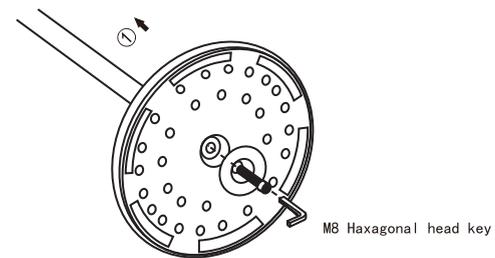

Put the black plate under the base, then connect the base and pole with screws, using the hexagonal head screw to tighten them together.

1


Step 2

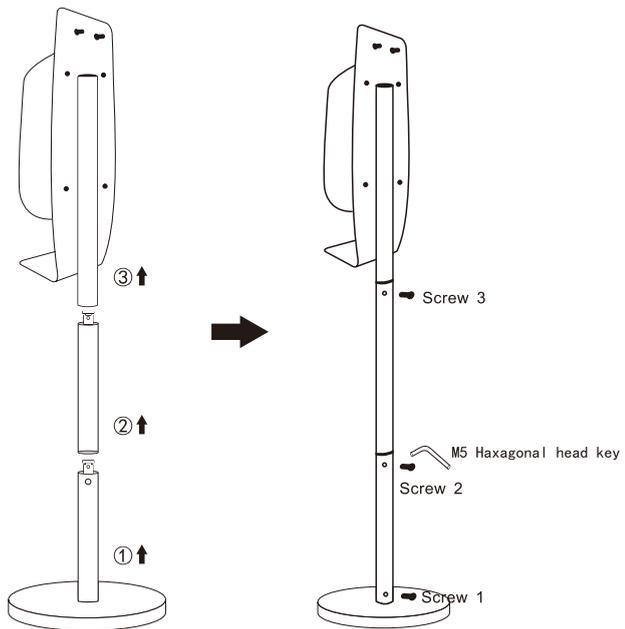

Put three folds of aluminum poles in order, then connect them with screws.

2

Step 3

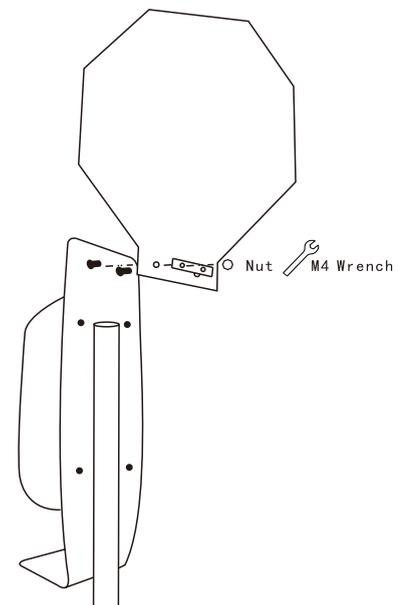

Aim the holes on billboard to the holes on the back pannel, connect them by tighten the nuts.

3